


Installation Manual | SKUARIO Pillar

Product Version: 1.0

Version of this manual: 1.1.4

© 2017 SKUARIO B.V. All rights reserved

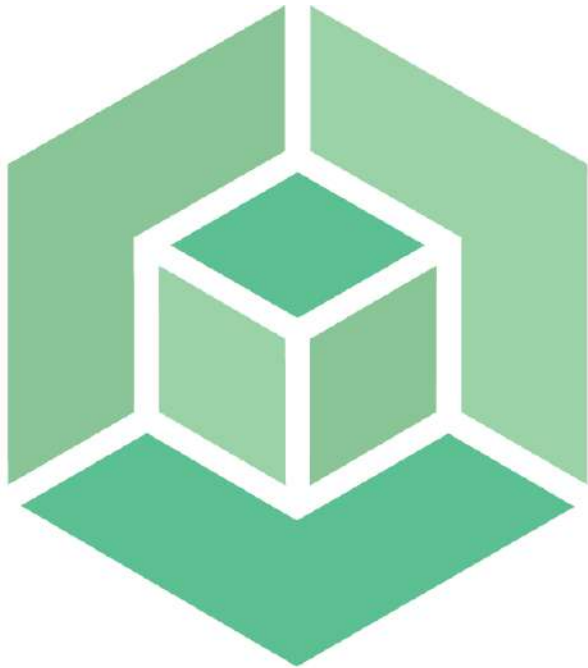

SKUARIO

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Version 1.1.4 created: August 2017 in Nieuw-Vennep.

Publisher
SKUARIO B.V.

Managing Editor
K. de Graaf

Technical Editors
K. de Graaf


Cover Design
H. Wagenaar
K. de Graaf


Team Coordinator
R. Groen

Production
SKUARIO B.V.

Table of Content

Introduction	5
Product Content	7
Required	10
Pillar Position	12
Hardware Assembly	14
1 Mount SKUARIO Box	15
2 Lock Money Tray	17
3 Pillar with MFP	18

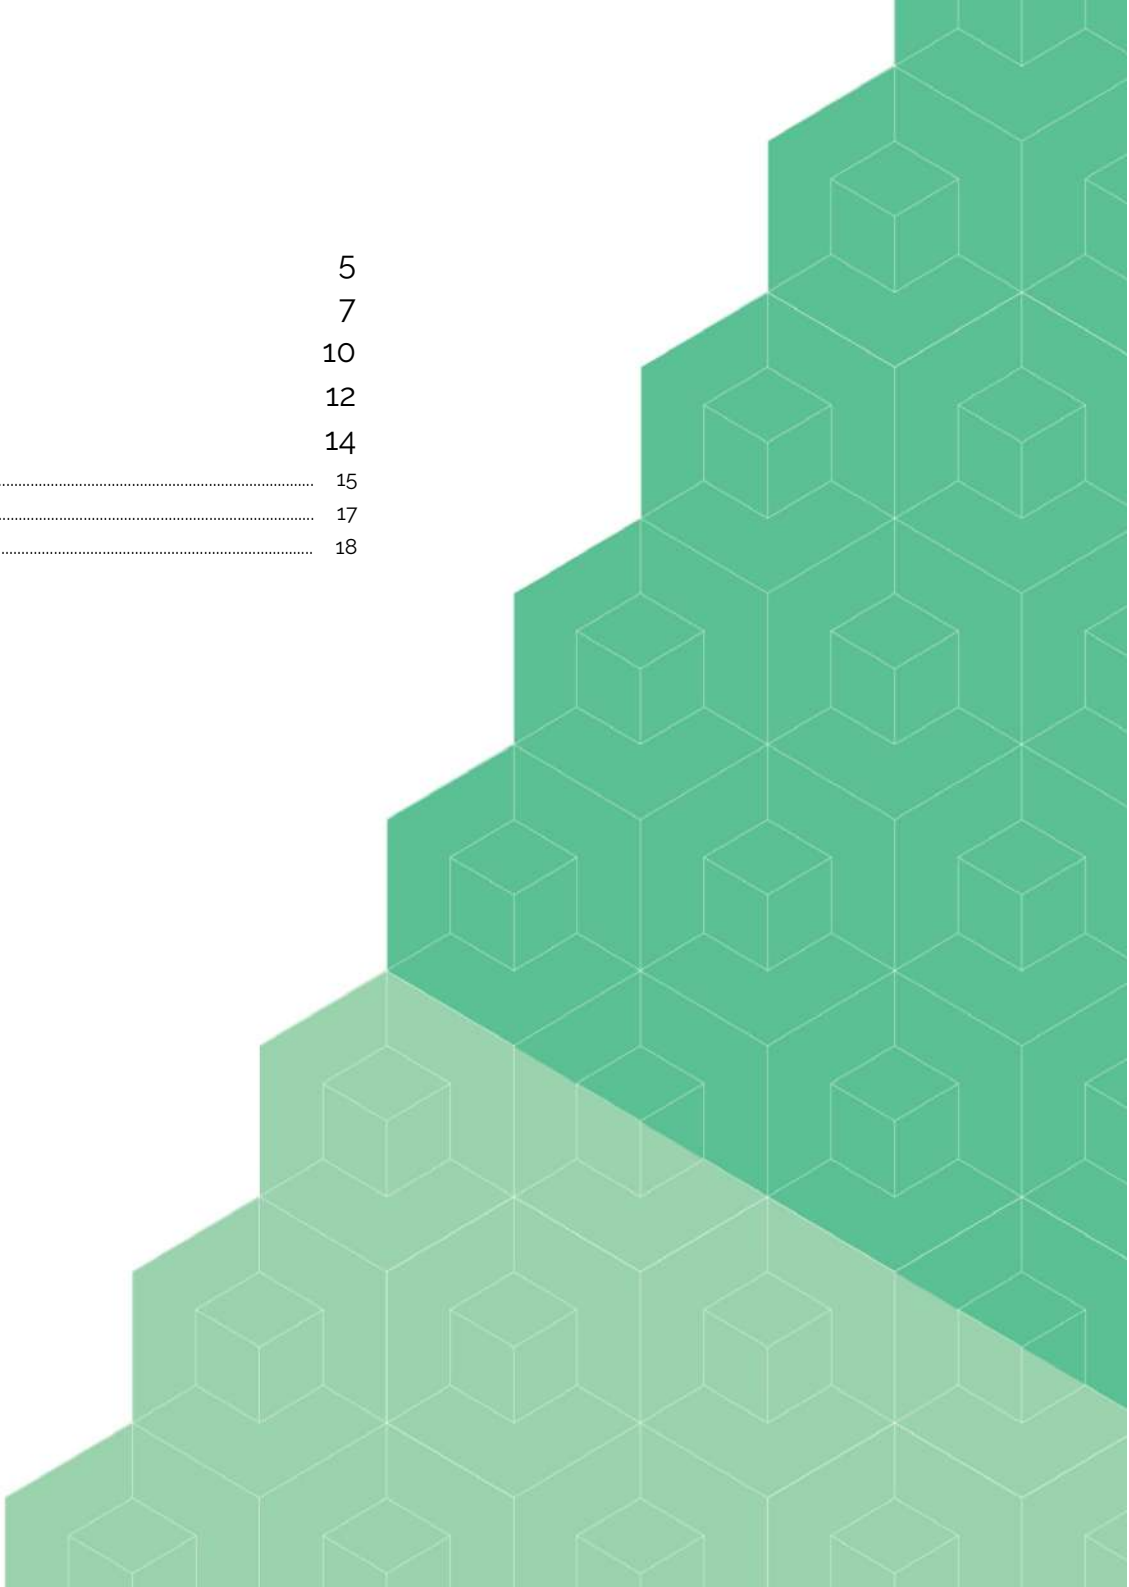

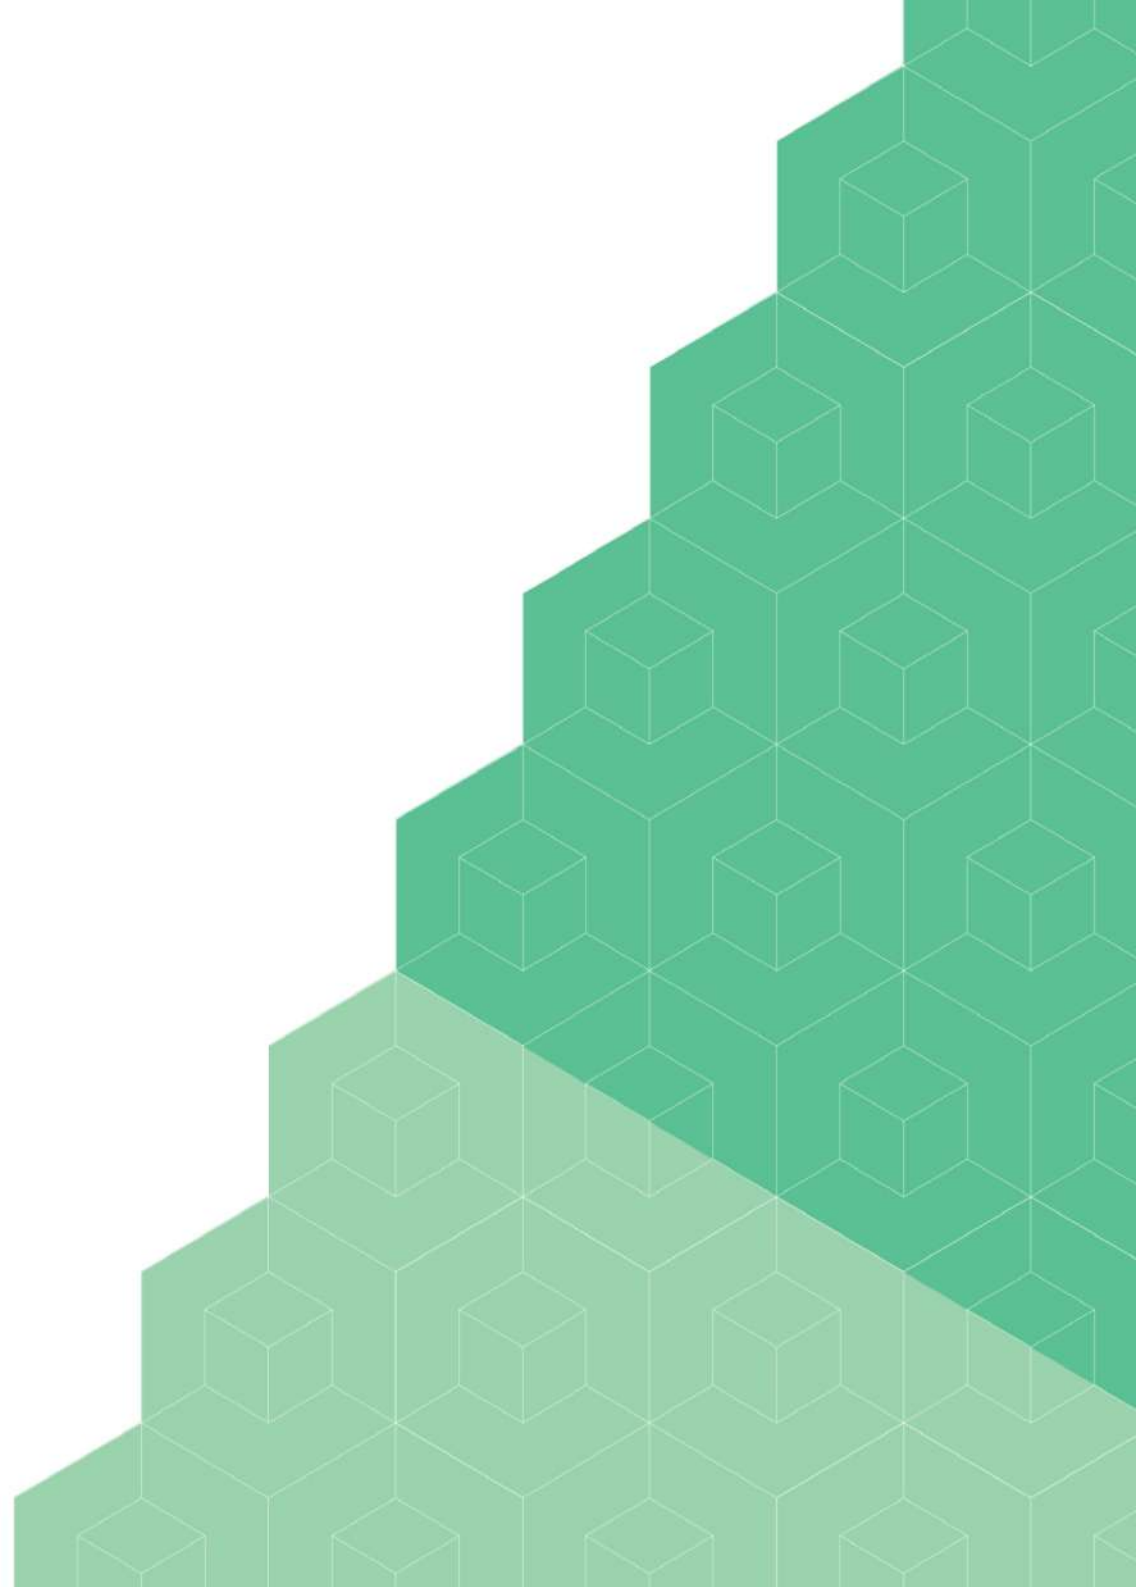


Introduction

Introduction

Pillar - Product No. SKH.200600

The Pillar is a metal construction able to mount a SKUARIO Box. This is used when you can not or do not wish to attach the SKUARIO Box to a wall or if you need the increased coin storage capacity. The Pillar is mostly placed next to a Multi Functional Printer (MFP). You can position the wheels of the MFP into the ground plate, fixating the MFP and the Pillar.

This manual will help you to mount the SKUARIO Box on the Pillar.

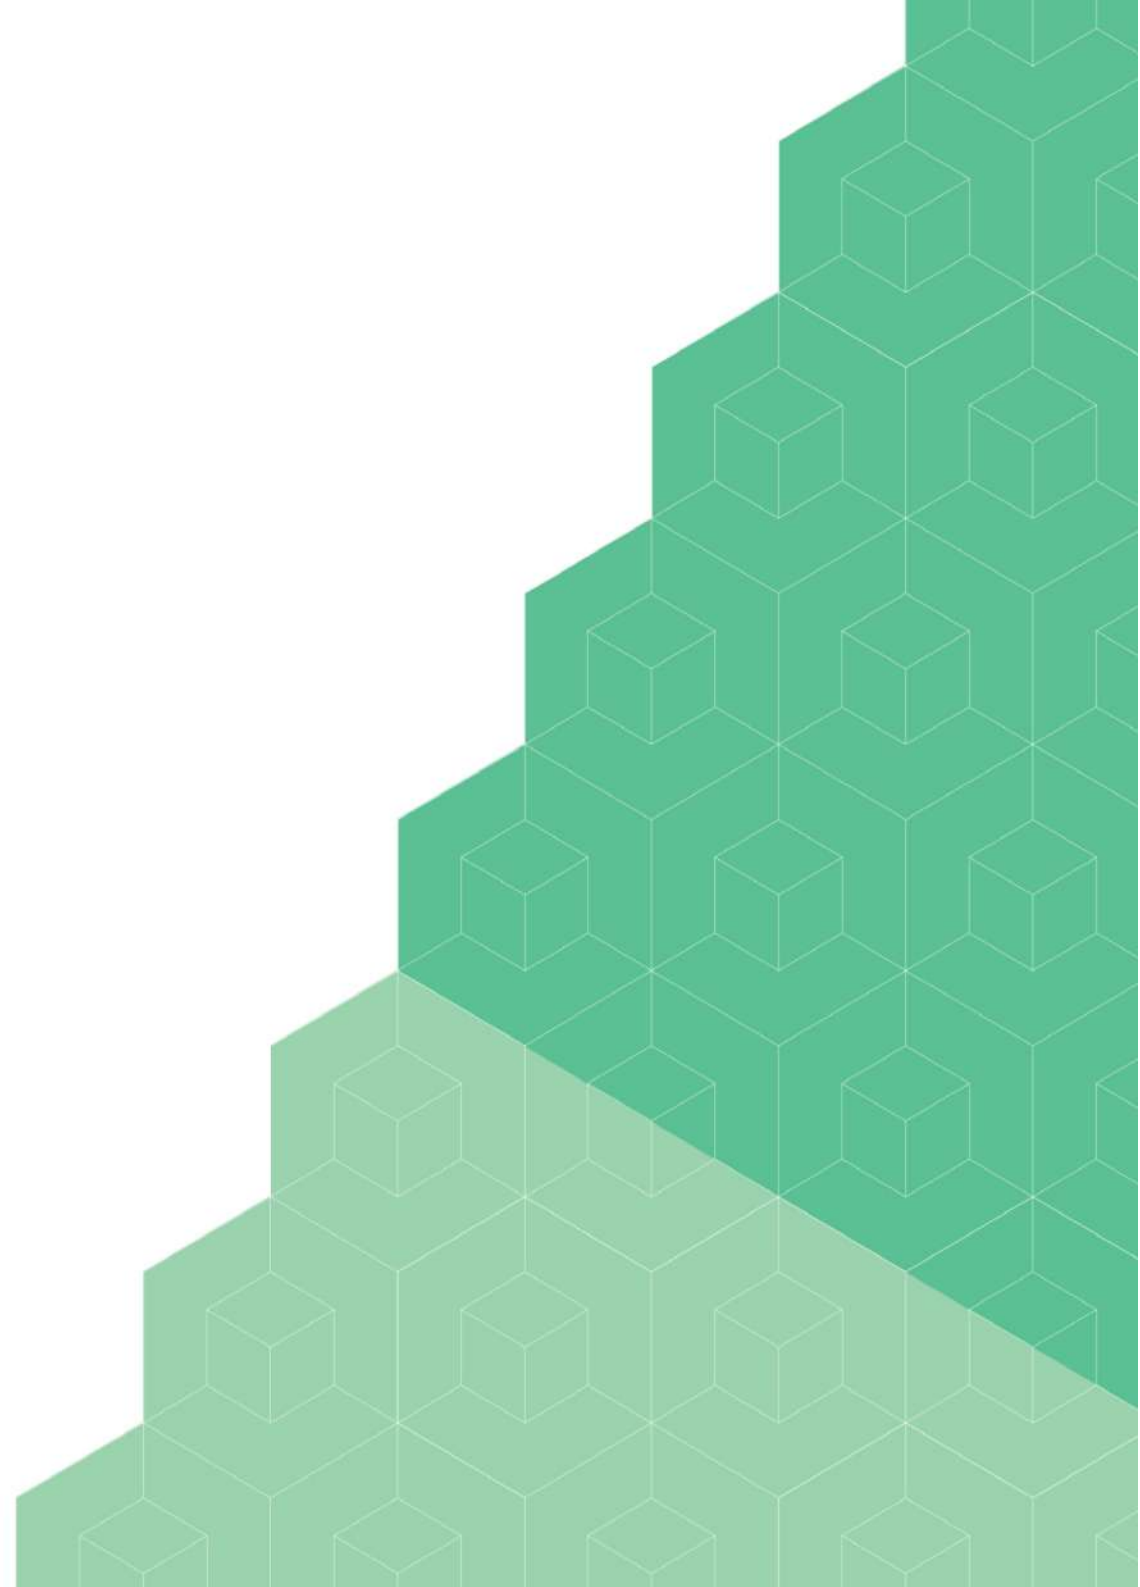

Product Content

Product Content

When you receive the Pillar please check if you have all the parts:



<- about 55 cm. ->

Base plate



<- about 65 cm ->

Main Pillar and money container (the upper part of the Pillar)



Padlock

MFP wheel lock bar

2x SKUARIO Box clips

2x SKUARIO Box screws

3x Tie wrap

4x 10M
Bolts for
bottom
plate


2x Screws
for MFP
lock bar

Product Content

Parts List

Main Pillar - Item No. 132957

- Base plate
- Main Pillar
- Money Container
- Padlock
- MFP wheel lock bar
- 2x SKUARIO Box clips
- 2x SKUARIO Box screws
- 3x tie wraps
- 4x 10M Bolts for bottom plate
- 2x Screws for MFP lock bar

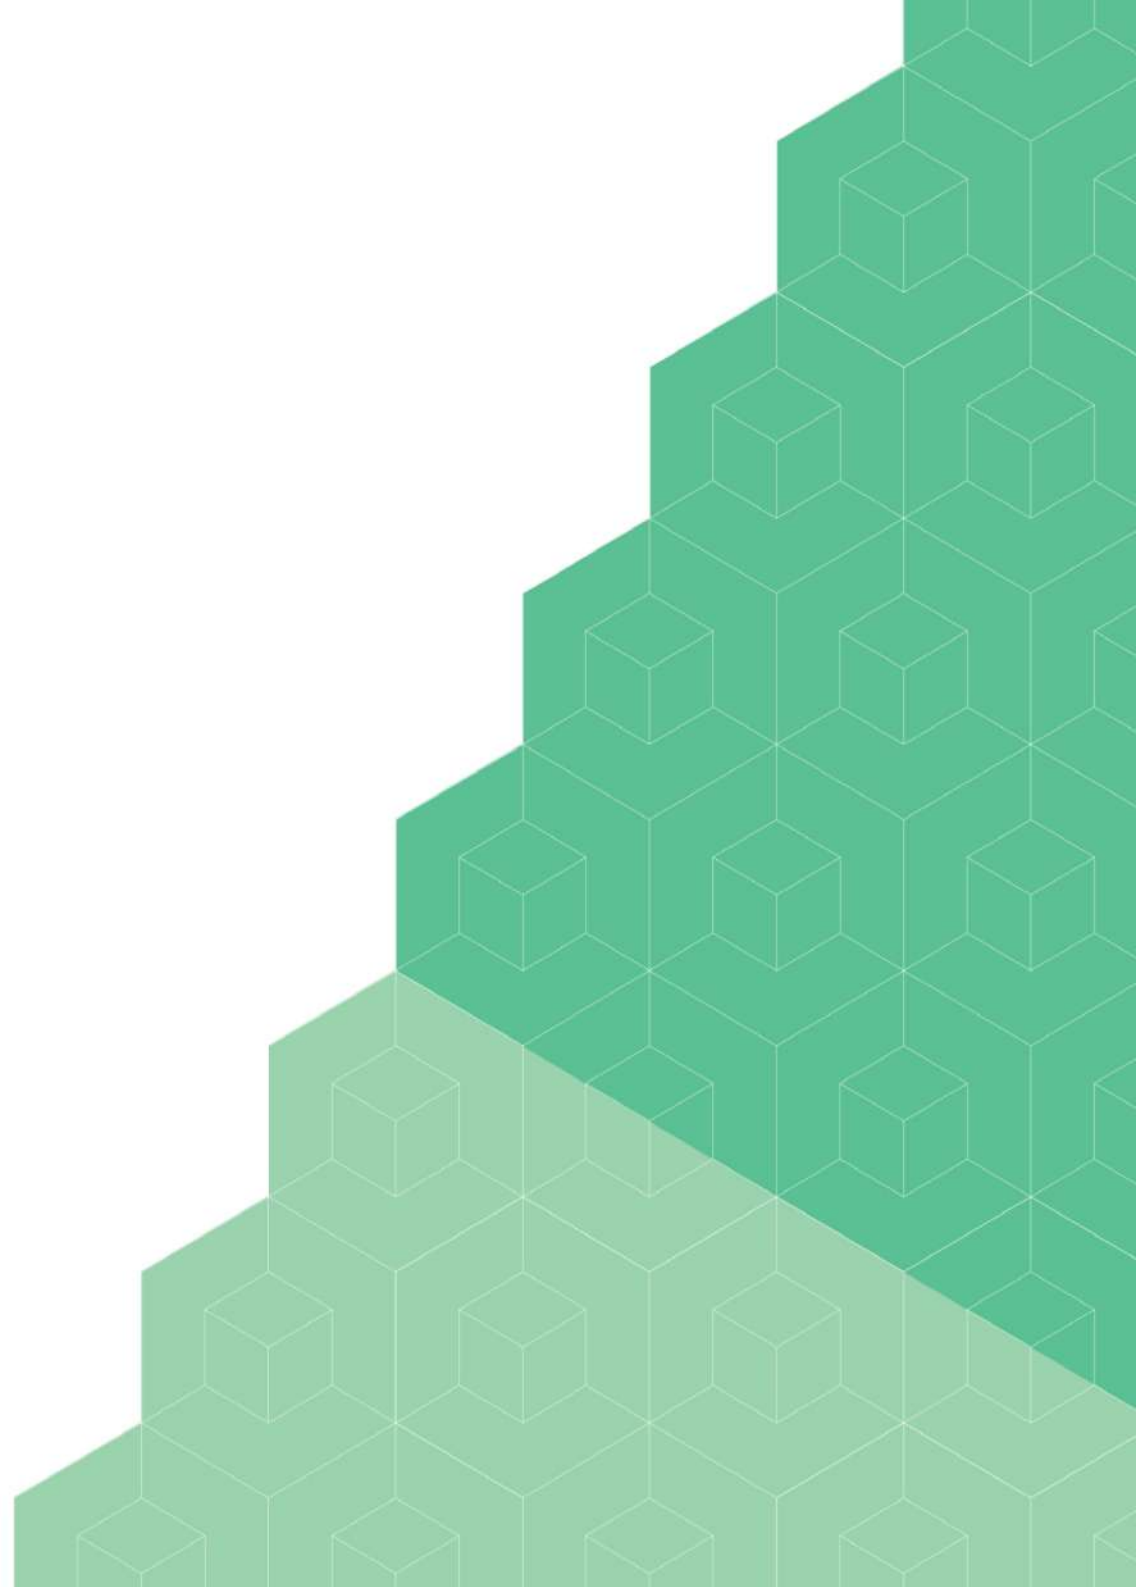

Required

Required


Products required

- SKUARIO Box

Tools required

- PoziDriv Screwdrivers
- M10 Wrench
- Wire cutter or utility knife



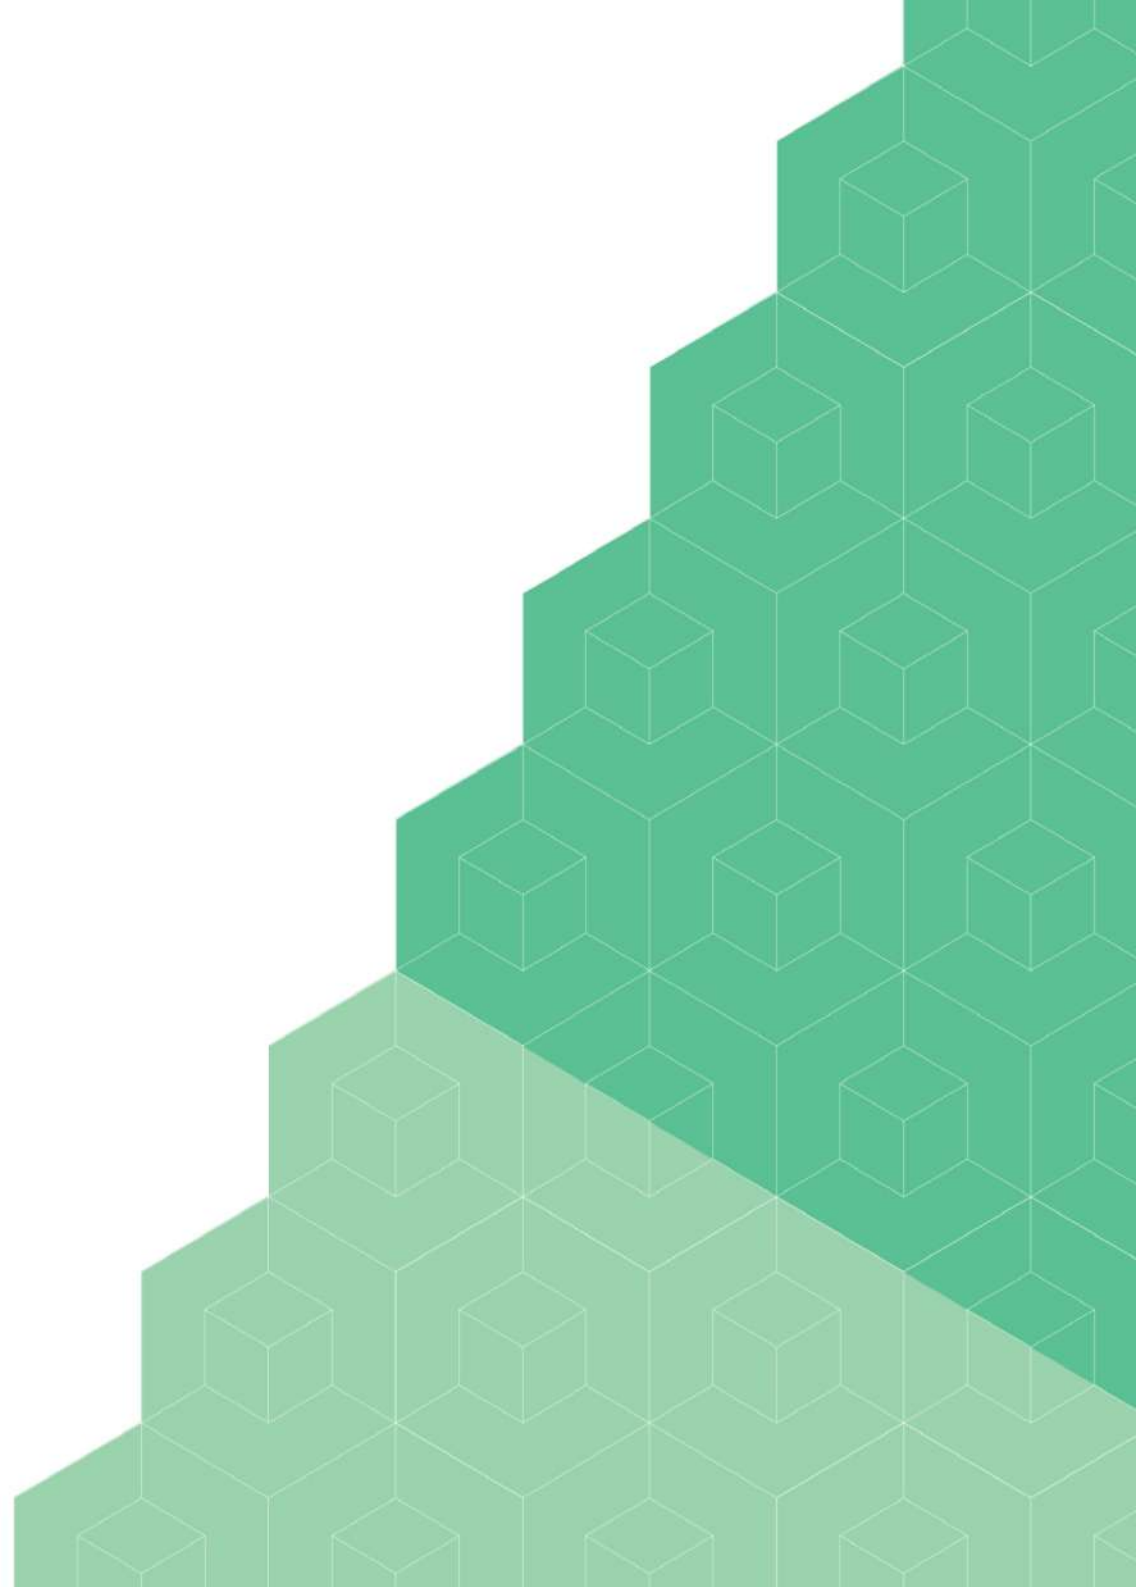


Pillar Position

Pillar Position

Decide on which side of the MFP the Pillar will be positioned. When the Pillar will not be positioned near a MFP, you will need to decide on how the base plate will be aligned.




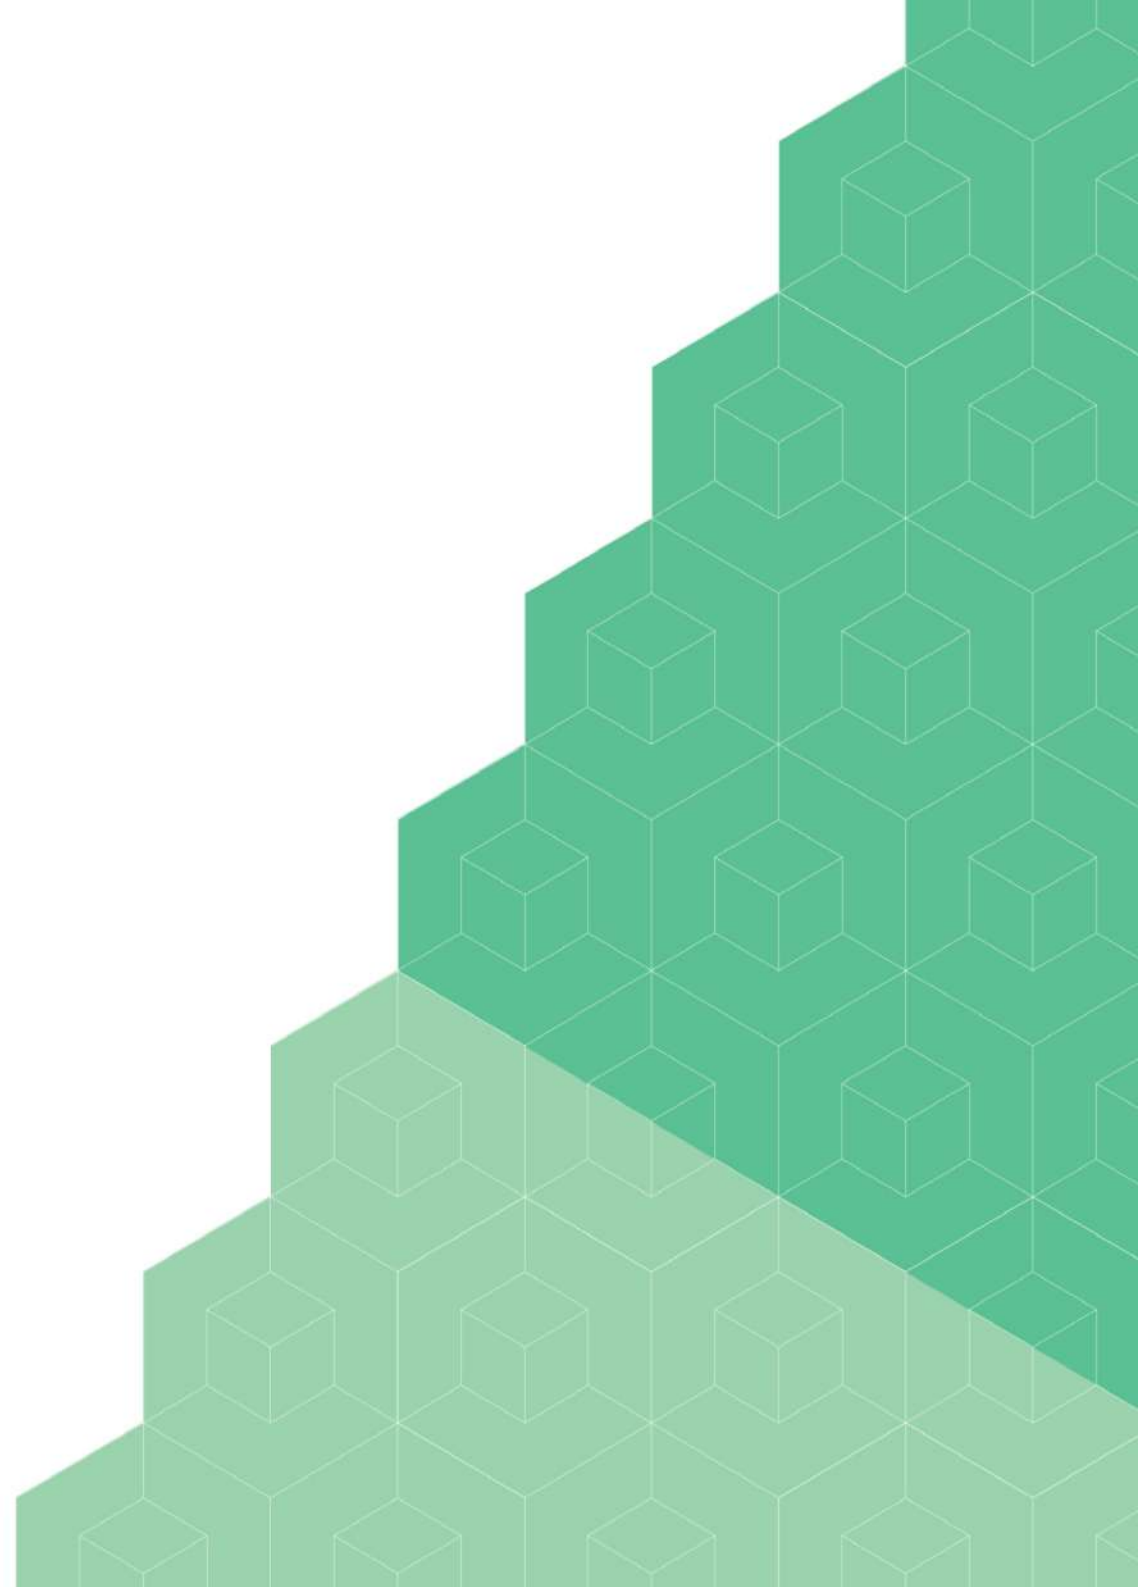


Hardware Assembly

Hardware Assembly

Execute the following steps:

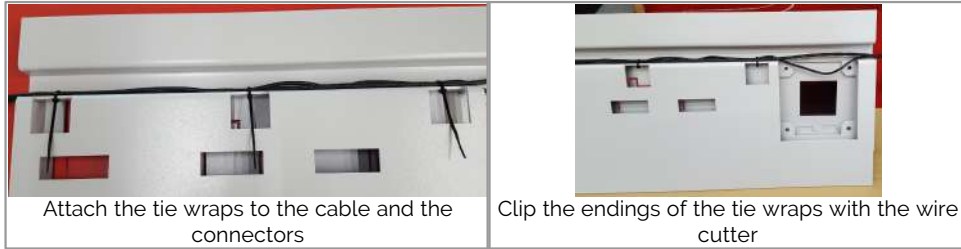

1. Use the tie wraps to fasten the cable.
8. Remove money tray. Do this by lifting the tray up (A) and let the bottom swing out (B). Now remove the tray from the pillar (C).

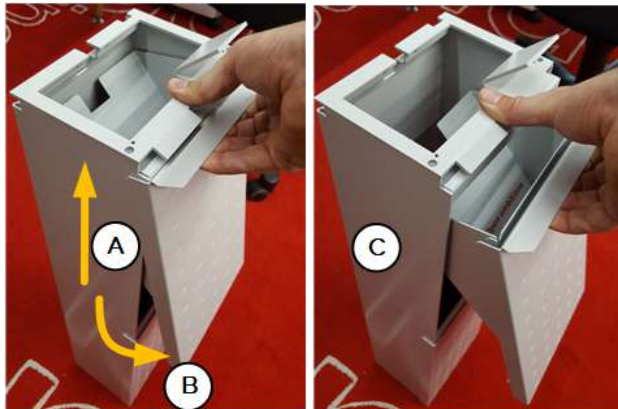

Hardware Assembly

2. Lay down the main Pillar with the front end down on the ground.
3. Align the four holes in the base plate with the four holes at the bottom of the Pillar. (You might want to use a piece of wood or cardboard to lift the main Pillar up high enough).



6. Use the socket spanner to bolt the base plate to the Pillar.
7. Return the Pillar to the upright position.


SKUARIO Box

8. Mount the SKUARIO Box (without the front) on top of the Pillar and close the front lid.
9. Now get in a position to view the bottom of the SKUARIO Box.



Hardware Assembly

10. Clip the SKUARIO Box clips on the sides of the SKUARIO Box (D) and the Pillar to keep the SKUARIO Box into place.
11. Apply the lock pins. See step E in the image below.
12. Use the SKUARIO Box screws (the smallest screws) to lock the locking pins. (F)

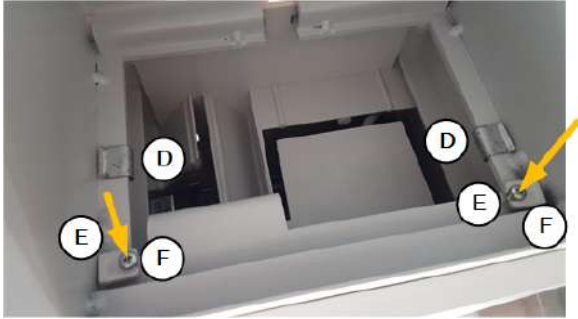

11. Guide the cables outside onto the Pillar.



Hardware Assembly

11. Remove the keys from the padlock. Get one key off the key ring, use it to open the lock, get the key ring of the lock.



12. Put the money tray back into place.
13. Lock the money tray on the back of the Pillar.



Hardware Assembly

Only if SKUARIO Pillar is used next to an MFP:

11. Place the appropriate MFP wheel in one of the MFP wheel holes in the base plate.
12. If you use the big wheel hole, lock it with the MFP wheel lock bar using the two lock bar screws.




MFP lock on the Pillar base



SKUARIO Box on the Pillar

Make sure to put the wheel in the appropriate wheel hole to acquire the proper distance between the MFP and the pillar.
Make sure the MFP can operate, all it's functions can be used and all doors and lids can be opened.

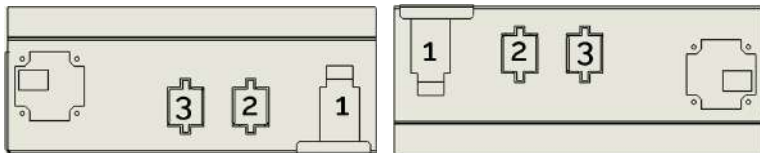

Hardware Assembly

<This page has intentionally been left blank>

